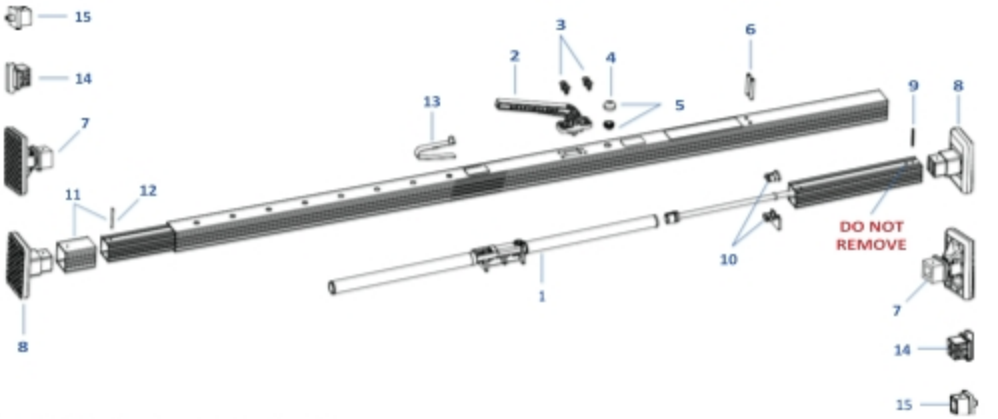

SL-20 & SL-30 COMPONENTS

#	PART NUMBER	DESCRIPTION
1	080-R091	Heavy Duty Hydraulic System for SL-30 & SL-20 Cargo Bars
2	080-R131	Pump Handle Assembly
3	080-A145-100 080-A145SS-100	Bracket Screw (Zinc) Bracket Screw (Stainless Steel)
4	080-H113	Release Button Cover
5	080-R010	Release Button Assembly w/Cover
6	080-A107-50	Roll Pin 1/4" x 1-3/4" for Main Tube (Zinc)
7	080-R060R	Articulating Foot with Roll Pin
8	080-R070	Fixed Foot with Roll Pin
9	080-A091-50	Roll Pin 1/8" x 1-1/2" for foot without extension tube collar
10	080-R020	End Guide Assembly
11	080-R031	Extension Tube Collar and Roll Pin
12	080-A108-50	Roll Pin 1/8" x 1-3/4" (Zinc)
13	080-A151 080-A151SS	Snap Button (Zinc) Snap Button (Stainless Steel)
14	080-R036	E-Track Foot with Roll Pin
15	080-R035	F-Track Foot with Roll Pin
16	080-R045R	Extension Tube with Articulating Foot
17	080-R055R	Extension Tube with Fixed Foot
18	080-R121	Power Tube & Power Rod with Fixed Foot and End Guides
19	080-R111R	Power Tube & Power Rod with Articulating Foot and End Guides
-	080-R122	Power Tube & Power Rod with F-Track Foot and End Guides